

# ISO 16122-3:2015-03 (E)

## Agricultural and forestry machinery - Inspection of sprayers in use - Part 3: Sprayers for bush and tree crops

---

<b>Contents</b>		<b>Page</b>
<b>5</b>	<b>Test methods .....</b>	<b>9</b>
<b>5.1</b>	<b>Test facilities .....</b>	<b>9</b>
<b>5.2</b>	<b>Spray and agitation pump(s) .....</b>	<b>9</b>
<b>5.2.1</b>	<b>Pump capacity test .....</b>	<b>9</b>
<b>5.2.2</b>	<b>Pump pulsations .....</b>	<b>10</b>
<b>5.3</b>	<b>Sprayer's pressure indicators .....</b>	<b>10</b>
<b>5.3.1</b>	<b>Specifications of pressure indicators used for verification .....</b>	<b>10</b>
<b>5.3.2</b>	<b>Verification method of the sprayer pressure indicator .....</b>	<b>11</b>
<b>5.4</b>	<b>Flow meters for controlling the volume/hectare rate .....</b>	<b>11</b>
<b>5.4.1</b>	<b>General .....</b>	<b>11</b>
<b>5.4.2</b>	<b>Operating procedure No. 1: Verification by nozzle flow rate measurement .....</b>	<b>11</b>
<b>5.4.3</b>	<b>Operating Procedure No. 2: Verification by installing a calibrated flow meter on the circuit of the sprayer .....</b>	<b>12</b>
<b>5.5</b>	<b>System for controlling forward speed .....</b>	<b>12</b>
<b>5.6</b>	<b>Flow rate of the spray nozzles .....</b>	<b>13</b>
<b>5.6.1</b>	<b>General .....</b>	<b>13</b>
<b>5.6.2</b>	<b>Measurement with nozzles fitted on the sprayer .....</b>	<b>13</b>
<b>5.6.3</b>	<b>Measurement with nozzles removed from the sprayer .....</b>	<b>13</b>
<b>5.7</b>	<b>Pressure drop .....</b>	<b>14</b>
<b>5.8</b>	<b>Pressure variation when the spray is switched off .....</b>	<b>14</b>
<b>5.9</b>	<b>Pressure distribution .....</b>	<b>14</b>
	<b>Bibliography .....</b>	<b>15</b>