

# ISO 9928-1:2015-06 (E)

## Cranes - Crane operating manual - Part 1: General

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>Presentation of the manual .....</b>	<b>1</b>
<b>4.1</b>	<b>General .....</b>	<b>1</b>
<b>4.2</b>	<b>Preliminary information .....</b>	<b>2</b>
<b>4.3</b>	<b>Number of books .....</b>	<b>2</b>
<b>5</b>	<b>of the operating manual .....</b>	<b>2</b>
<b>5.1</b>	<b>Technical data .....</b>	<b>2</b>
<b>5.2</b>	<b>Special safety advice .....</b>	<b>2</b>
<b>5.2.1</b>	<b>Crane .....</b>	<b>2</b>
<b>5.2.2</b>	<b>Operating area .....</b>	<b>3</b>
<b>5.2.3</b>	<b>Setting up of the crane .....</b>	<b>3</b>
<b>5.2.4</b>	<b>Securing of the crane .....</b>	<b>3</b>
<b>5.2.5</b>	<b>Working clothes and personal equipment .....</b>	<b>3</b>
<b>5.3</b>	<b>Operator's aids and controls .....</b>	<b>3</b>
<b>5.4</b>	<b>Operator's instructions .....</b>	<b>3</b>
<b>5.5</b>	<b>Load diagrams and load tables .....</b>	<b>3</b>
<b>5.6</b>	<b>Safety devices .....</b>	<b>3</b>
<b>5.7</b>	<b>Environmental conditions .....</b>	<b>3</b>