

# ISO 20474-2:2017-07 (E)

## Earth-moving machinery - Safety - Part 2: Requirements for dozers

---

| <b>Contents</b>    |  | <b>Page</b> |
|--------------------|--|-------------|
| Foreword .....     |  | iv          |
| Introduction ..... |  | v           |
| <b>1</b>           | <b>Scope .....</b>                                       | <b>1</b>    |
| <b>2</b>           | <b>Normative references .....</b>                        | <b>1</b>    |
| <b>3</b>           | <b>Terms and definitions .....</b>                       | <b>1</b>    |
| <b>4</b>           | <b>Safety requirements and protective measures .....</b> | <b>2</b>    |
| <b>4.1</b>         | <b>General .....</b>                                     | <b>2</b>    |
| <b>4.2</b>         | <b>Operator's seat .....</b>                             | <b>2</b>    |
| <b>4.3</b>         | <b>Rear windows .....</b>                                | <b>2</b>    |
| <b>4.4</b>         | <b>Rear-mounted winch .....</b>                          | <b>2</b>    |
| <b>4.4.1</b>       | <b>Mounting .....</b>                                    | <b>2</b>    |
| <b>4.4.2</b>       | <b>Controls .....</b>                                    | <b>2</b>    |
| <b>4.4.3</b>       | <b>Protection .....</b>                                  | <b>2</b>    |
| <b>5</b>           | <b>Information for use .....</b>                         | <b>3</b>    |
| <b>5.1</b>         | <b>Safety labels .....</b>                               | <b>3</b>    |
| <b>5.2</b>         | <b>Operator's manual .....</b>                           | <b>3</b>    |
| <b>5.3</b>         | <b>Machine marking .....</b>                             | <b>3</b>    |
|                    | <b>Annex A (informative) Illustrations .....</b>         | <b>4</b>    |
|                    | <b>Bibliography .....</b>                                | <b>6</b>    |