

# ISO 11525-2:2020-01 (E)

## Rough-terrain trucks - Safe use requirements - Part 2: Slewing variable-reach trucks

<b>Contents</b>	<b>Page</b>
<b>Foreword</b> .....	<b>iv</b>
<b>Introduction</b> .....	<b>v</b>
<b>1 Scope</b> .....	<b>1</b>
<b>2 Normative references</b> .....	<b>1</b>
<b>3 Terms and definitions</b> .....	<b>1</b>
<b>4 General requirements</b> .....	<b>2</b>
4.1 Principles.....	2
4.2 Operator's manual(s).....	2
4.3 Modifications or alterations.....	2
4.4 Manufacturer's bulletins.....	3
4.5 Operator qualifications and training.....	3
4.6 Inspection and maintenance.....	3
4.6.1 General.....	3
4.6.2 Preparation for inspection or repair.....	3
4.6.3 Performance checks.....	4
4.6.4 Inspection and maintenance precautions.....	5
4.6.5 Inspection and maintenance requirements.....	5
4.7 Hazardous environments.....	6
4.8 Refuelling.....	6
<b>5 Operating safety rules and precautions</b> .....	<b>6</b>
5.1 Operator's responsibility for safety.....	6
5.2 Visual inspection and functional tests.....	7
5.3 General operating instructions.....	8
5.4 Travelling.....	9
5.5 Picking and placing loads.....	10
5.6 Using attachments.....	11
<b>Bibliography</b> .....	<b>13</b>