

# ISO 11525-1:2020-01 (E)

## Rough-terrain trucks - Safe use requirements - Part 1: Variable-reach trucks

<b>Contents</b>		<b>Page</b>
<b>Foreword</b>		<b>iv</b>
<b>1</b>	<b>Scope</b>	<b>1</b>
<b>2</b>	<b>Normative references</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions</b>	<b>1</b>
<b>4</b>	<b>General requirements</b>	<b>2</b>
4.1	Principles	2
4.2	Operator's manual(s)	3
4.3	Modifications or alterations	3
4.4	Manufacturer's bulletins	3
4.5	Operator qualifications and training	4
4.6	Inspection and maintenance	4
4.6.1	General	4
4.6.2	Preparation for inspection or repair	4
4.6.3	Performance checks	4
4.6.4	Inspection and maintenance precautions	5
4.6.5	Inspection and maintenance requirements	6
4.7	Hazardous environments	6
4.8	Refuelling	7
<b>5</b>	<b>Operating safety rules and precautions</b>	<b>7</b>
5.1	Operator's responsibility for safety	7
5.2	Visual inspection and functional tests	7
5.3	General operating instructions	8
5.4	Travelling	10
5.5	Picking and placing loads	11
5.6	Using attachments	12
<b>Bibliography</b>		<b>13</b>