

# ISO 10300-2:2023-08 (E)

## Calculation of load capacity of bevel gears - Part 2: Calculation of surface durability (macropitting)

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
Introduction .....		vi
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>Symbols, general subscripts and abbreviated terms .....</b>	<b>2</b>
<b>5</b>	<b>Macropitting damage -- General aspects .....</b>	<b>6</b>
<b>5.1</b>	<b>Acceptable versus unacceptable macropitting .....</b>	<b>6</b>
<b>5.2</b>	<b>Assessment requirements .....</b>	<b>6</b>
<b>5.3</b>	<b>General rating procedure .....</b>	<b>7</b>
<b>6</b>	<b>Gearflankratingformulae--MethodB1 .....</b>	<b>7</b>
<b>6.1</b>	<b>Contact stress formula .....</b>	<b>7</b>
<b>6.2</b>	<b>Permissible contact stress .....</b>	<b>8</b>
<b>6.3</b>	<b>Calculated safety factor for contact stress .....</b>	<b>8</b>
<b>6.4</b>	<b>Contact stress factors .....</b>	<b>9</b>
<b>6.4.1</b>	<b>Mid-zone factor, ZM-B .....</b>	<b>9</b>
<b>6.4.2</b>	<b>Load sharing factor, ZLS .....</b>	<b>10</b>
<b>6.5</b>	<b>Permissible contact stress factors .....</b>	<b>11</b>
<b>6.5.1</b>	<b>Bevel gear factor, ZKP .....</b>	<b>11</b>
<b>6.5.2</b>	<b>Size factor, ZX .....</b>	<b>12</b>
<b>6.5.3</b>	<b>Hypoid factor, ZHyp .....</b>	<b>12</b>
<b>7</b>	<b>Gearflankratingformulae--MethodB2 .....</b>	<b>15</b>
<b>7.1</b>	<b>Contact stress formula .....</b>	<b>15</b>
<b>7.2</b>	<b>Permissible contact stress .....</b>	<b>16</b>
<b>7.3</b>	<b>Calculated safety factor for contact stress .....</b>	<b>16</b>
<b>7.4</b>	<b>Contact stress factors .....</b>	<b>16</b>
<b>7.4.1</b>	<b>General .....</b>	<b>16</b>
<b>7.4.2</b>	<b>Macropitting resistance geometry factor, ZI .....</b>	<b>17</b>
<b>7.4.3</b>	<b>Facewidth factor, ZFW .....</b>	<b>20</b>
<b>7.4.4</b>	<b>Contact stress adjustment factor, ZA .....</b>	<b>20</b>
<b>8</b>	<b>Factors for contact stress and permissible contact stress common for method B1 and method B2 .....</b>	<b>21</b>
<b>8.1</b>	<b>Elasticity factor, ZE .....</b>	<b>21</b>
<b>8.2</b>	<b>Lubricant film influence factors, ZL, Zv, ZR .....</b>	<b>21</b>
<b>8.2.1</b>	<b>General .....</b>	<b>21</b>
<b>8.2.2</b>	<b>Restrictions .....</b>	<b>21</b>
<b>8.2.3</b>	<b>Method B .....</b>	<b>21</b>
<b>8.2.4</b>	<b>Method C (product of ZL, Zv and ZR) .....</b>	<b>23</b>
<b>8.3</b>	<b>Work hardening factor, ZW .....</b>	<b>23</b>
<b>8.3.1</b>	<b>General .....</b>	<b>23</b>
<b>8.3.2</b>	<b>Work hardening factor, ZW: Method A .....</b>	<b>23</b>
<b>8.3.3</b>	<b>Work hardening factor, ZW: Method B .....</b>	<b>24</b>

8.4	Life factor, ZNT .....	26
8.4.1	General .....	26
8.4.2	Method A .....	27
8.4.3	Method B .....	28
Annex A (informative) Local calculation method for surface durability (macropitting)- Method B1- localised .....		29
Bibliography .....		35