

# ISO 4190-2:2001-02 (E)

## Lift (US: Elevator) installation - Part 2: Class IV lifts

---

<b>Contents</b>		<b>Page</b>
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>Lift characteristics .....</b>	<b>4</b>
<b>4.1</b>	<b>Renard series .....</b>	<b>4</b>
<b>4.2</b>	<b>Rated loads .....</b>	<b>4</b>
<b>4.3</b>	<b>Rated speeds .....</b>	<b>5</b>
<b>4.4</b>	<b>Lift selection .....</b>	<b>5</b>
<b>5</b>	<b>Dimensions .....</b>	<b>5</b>
<b>5.1</b>	<b>Inner dimensions of cars .....</b>	<b>5</b>
<b>5.2</b>	<b>Inner dimensions of well (US: hoistway) .....</b>	<b>5</b>
<b>5.3</b>	<b>Dimensions of landings .....</b>	<b>6</b>
<b>5.4</b>	<b>Dimensions of machine room .....</b>	<b>6</b>
<b>5.5</b>	<b>Arrangement of machine room .....</b>	<b>6</b>