

# ISO 12510:2004-03 (E)

## Earth-moving machinery - Operation and maintenance - Maintainability guidelines

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
1	<b>Scope .....</b>	<b>1</b>
2	<b>Normative references .....</b>	<b>1</b>
3	<b>Terms and definitions .....</b>	<b>1</b>
4	<b>General .....</b>	<b>1</b>
5	<b>Location of items .....</b>	<b>2</b>
6	<b>Access system .....</b>	<b>3</b>
7	<b>Access apertures .....</b>	<b>3</b>
8	<b>Covers .....</b>	<b>4</b>
9	<b>Tools .....</b>	<b>4</b>
10	<b>Service instrumentation .....</b>	<b>4</b>
11	<b>Labelling .....</b>	<b>4</b>
12	<b>Accompanying documentation .....</b>	<b>5</b>
<b>Annex A (informative) Matrixes of maintainability .....</b>		<b>7</b>
<b>Bibliography .....</b>		<b>11</b>