

# ISO 5673-2:2005-02 (E)

**Agricultural tractors and machinery - Power take-off drive shafts and power-input connection - Part 2: Specification for use of PTO drive shafts, and position and clearance of PTO drive line and PIC for various attachments**

---

| <b>Contents</b> |  | <b>Page</b> |
|-----------------|--|-------------|
|                 | <b>Foreword</b> .....  | <b>iv</b>   |
| <b>1</b>        | <b>Scope</b> .....   | <b>1</b>    |
| <b>2</b>        | <b>Normative references</b> .....                                  | <b>1</b>    |
| <b>3</b>        | <b>Terms and definitions</b> .....                                 | <b>2</b>    |
| <b>4</b>        | <b>Application and use of PTO drive shafts</b> .....               | <b>2</b>    |
| <b>5</b>        | <b>Position and clearance of PIC for various attachments</b> ..... | <b>4</b>    |