

# ISO 11088:2006-10 (E)

## Assembly, adjustment and inspection of an alpine ski/binding/boot (S-B-B) system

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
Introduction .....		v
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>2</b>
<b>4</b>	<b>Skier's parameters .....</b>	<b>3</b>
<b>4.1</b>	<b>General .....</b>	<b>3</b>
<b>4.2</b>	<b>Weight method .....</b>	<b>3</b>
<b>5</b>	<b>Equipment parameters .....</b>	<b>3</b>
<b>5.1</b>	<b>Choice of new equipment .....</b>	<b>3</b>
<b>5.2</b>	<b>Visual inspection and preparation of used equipment .....</b>	<b>4</b>
<b>5.3</b>	<b>Assembly .....</b>	<b>4</b>
<b>5.4</b>	<b>Binding-to-boot fitting adjustments .....</b>	<b>4</b>
<b>5.5</b>	<b>Initial indicator adjustment .....</b>	<b>4</b>
<b>5.6</b>	<b>Functional check (inspection of functions) .....</b>	<b>4</b>
<b>5.7</b>	<b>Measurement of release moment .....</b>	<b>5</b>
<b>5.8</b>	<b>Report .....</b>	<b>5</b>
	<b>Annex A (normative) Definition of skier type .....</b>	<b>6</b>
	<b>Annex B (normative) Method of setting .....</b>	<b>7</b>
	<b>Annex C (normative) Flow chart .....</b>	<b>9</b>
	<b>Annex D (normative) Clean versus lubricated diagnostic test for boot/binding compatibility .....</b>	<b>10</b>
	<b>Annex E (normative) Drill .....</b>	<b>11</b>
	<b>Annex F (informative) Tibial width method .....</b>	<b>12</b>
	<b>Bibliography .....</b>	<b>16</b>