

DIN ISO 3547-5:2015-12 (E)

Plain bearings - Wrapped bushes - Part 5: Checking the outside diameter (ISO 3547-5:2007)

Contents		Page
National foreword		3
National Annex NA (informative) Bibliography		4
1	Scope	5
2	Normative references	5
3	Symbols and units	6
4	Outside diameter, Do	6
5	Purpose of checking	7
6	Methods of checking	7
6.1	Checking method A -- Measurement of outside diameter, Do	7
6.2	Checking method B -- Gauging of outside diameter, Do	7
6.3	Checking method D -- Measurement of outside diameter, Do > 120 mm	7
7	Selection of checking method for outside diameter	7
8	ISO 3547-2, test A -- Outside diameter, Do	7
8.1	Measuring equipment	7
8.2	Requirements for checking the block and the setting plug	9
8.3	Determination of correction factor, C	13
8.4	Procedure	14
8.5	Measuring errors	14
8.5.1	Errors due to measuring equipment	14
8.5.2	Errors due to the bush	14
8.5.3	Errors due to human factors	15
8.6	Summary of the factors relating to the measurement of the outside diameter, Do, of the bush	15
8.6.1	Checking load, Fch	15
8.6.2	Diameter of the checking block, dch, 1, and of the setting plug, dch, 2	15
8.6.3	Upper limiting value and lower limiting value for z	15
8.6.4	Correction factor, C	15
8.6.5	Conversion of the indicated measured value, z, for outside diameter	15
9	ISO 3547-2:2006, test B -- Outside diameter, Do	15
9.1	Gauging equipment	15
9.2	Requirements for measuring equipment	15
9.3	Procedure	16
9.4	Measuring errors	16
10	ISO 3547-2:2006, test D -- Outside diameter, Do > 120 mm	17
10.1	Gauging equipment	17
10.2	Measuring equipment	17
10.3	Procedure	17
10.4	Measuring errors	17
11	Specifications on drawings of bushes	18

12	Specifications for control of the checking equipment	18
12.1	Gauging equipment	18
12.2	Measuring equipment	18
	Bibliography	19