

ISO 21433:2018 (E)

Plain bearings — Handling of plain bearings

Contents

| | |
|--------|--|
| | Foreword |
| | Introduction |
| 1 | Scope |
| 2 | Normative references |
| 3 | Terms and definitions |
| 4 | Storage and transportation |
| 4.1 | General |
| 4.2 | Storage and transportation by packing |
| 4.2.1 | General |
| 4.2.2 | Purpose of packing |
| 4.2.3 | Packing method |
| 4.2.4 | Packing material |
| 4.2.5 | Unpacking |
| 4.3 | Storage and transportation in containers |
| 4.3.1 | General |
| 4.3.2 | Purpose of storage and transportation in containers |
| 4.3.3 | Points to notice at storage and transportation |
| 4.3.4 | Other methods of storage and transportation |
| 4.3.5 | Attachment of test and quality certificate |
| 4.4 | Selection of rust inhibitors and cleaning agents |
| 4.5 | Storage environment |
| 4.5.1 | Warehouse or storage room |
| 4.5.2 | Ambient temperature of storage room |
| 4.5.3 | Environmental humidity for storage room |
| 4.5.4 | First-in first-out |
| 4.6 | Handling |
| 4.7 | Documentation |
| 5 | Method of installation of plain bearings |
| 5.1 | Points to consider during plain bearings installation |
| 5.1.1 | Plain bearings |
| 5.1.2 | Housing |
| 5.1.3 | Press-fit method |
| 5.1.4 | Screw –fixing method |
| 5.1.5 | Keyed joint method |
| 5.1.6 | Retaining ring fixing method |
| 5.1.7 | Shrink fitting by cooling |
| 5.1.8 | Shrink fitting by heating |
| 5.1.9 | Points to notice during installation of plain bearings |
| 5.1.10 | Points to notice after installation of plain bearings |
| 5.2 | Mating shaft and assembly inspection |
| 5.2.1 | Mating shaft |
| 5.2.2 | Installation of shaft |
| 5.2.3 | Check of operation |
| 6 | Operation |
| 6.1 | Cleaning (flushing) of lubrication system |
| 6.2 | Running-in |
| 6.3 | Supervision during operation |
| 6.3.1 | Control and check items |

6.3.2 Record

7 Replacement of plain bearings

7.1 General

7.2 Dismounting of plain bearings

7.3 Replacement by new plain bearings

Page count: 9