

# ISO 1132-2:2001-09 (E)

## Rolling bearings - Tolerances - Part 2: Measuring and gauging principles and methods

---

| <b>Contents</b>   |  | <b>Page</b> |
|---|--|-------------|
| <b>Foreword</b> .....   |  | <b>iv</b>   |
| <b>1</b>  | <b>Scope</b> .....   | <b>1</b>    |
| <b>2</b>  | <b>Normative references</b> .....                                      | <b>1</b>    |
| <b>3</b>  | <b>Terms and definitions</b> .....                                     | <b>2</b>    |
| <b>4</b>  | <b>Symbols</b> .....   | <b>2</b>    |
| <b>5</b>  | <b>General conditions</b> .....  | <b>4</b>    |
| <b>6</b>  | <b>Measuring and gauging principles and methods</b> .....              | <b>7</b>    |
| <b>7</b>  | <b>Principles of measuring bore diameter</b> .....                     | <b>8</b>    |
| <b>8</b>  | <b>Principles of measuring outside diameter</b> .....                  | <b>14</b>   |
| <b>9</b>  | <b>Principles of measuring width and height</b> .....                  | <b>17</b>   |
| <b>10</b>   | <b>Principles of measuring ring and washer chamfer dimension</b> ..... | <b>24</b>   |
| <b>11</b>   | <b>Principles of measuring raceway parallelism</b> .....               | <b>26</b>   |
| <b>12</b>   | <b>Principles of measuring surface perpendicularity</b> .....          | <b>28</b>   |
| <b>13</b>   | <b>Principles of measuring thickness variation</b> .....               | <b>32</b>   |
| <b>14</b>   | <b>Principles of measuring radial runout</b> .....                     | <b>37</b>   |
| <b>15</b>   | <b>Principles of measuring axial runout</b> .....                      | <b>42</b>   |
| <b>16</b>   | <b>Principles of measuring radial clearance</b> .....                  | <b>45</b>   |
| <b>Annex A (normative) Cross-reference to clauses in ISO 1132-1</b> ..... |  | <b>47</b>   |