

# ISO 9628:2006-04 (E)

## Rolling bearings - Insert bearings and eccentric locking collars - Boundary dimensions and tolerances

---

<b>Contents</b>		<b>Page</b>
<b>Foreword</b> .....		<b>iv</b>
<b>1</b>	<b>Scope</b> .....	<b>1</b>
<b>2</b>	<b>Normative references</b> .....	<b>1</b>
<b>3</b>	<b>Terms and definitions</b> .....	<b>1</b>
<b>4</b>	<b>Symbols</b> .....	<b>1</b>
<b>5</b>	<b>Characteristics</b> .....	<b>5</b>
<b>5.1</b>	<b>General</b> .....	<b>5</b>
<b>5.2</b>	<b>Bore diameter</b> .....	<b>6</b>
<b>5.3</b>	<b>Outside diameter of bearing</b> .....	<b>6</b>
<b>5.4</b>	<b>Width of inner ring and locking device</b> .....	<b>6</b>
<b>5.5</b>	<b>Width of outer ring</b> .....	<b>6</b>
<b>5.6</b>	<b>Relubrication</b> .....	<b>6</b>
<b>6</b>	<b>Boundary dimensions</b> .....	<b>6</b>
<b>7</b>	<b>Tolerances</b> .....	<b>17</b>
<b>8</b>	<b>Radial internal clearances</b> .....	<b>17</b>