

# ISO 4250-2:2006-08 (E)

## Earth-mover tyres and rims - Part 2: Loads and inflation pressures

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>3.1</b>	<b>Definitions of masses .....</b>	<b>1</b>
<b>3.2</b>	<b>Definitions of operating conditions .....</b>	<b>2</b>
<b>3.3</b>	<b>Definition of vehicle type .....</b>	<b>3</b>
<b>4</b>	<b>Special conditions .....</b>	<b>3</b>
<b>5</b>	<b>Selection of tyres for new machine design .....</b>	<b>3</b>
<b>6</b>	<b>Inflation pressures - General .....</b>	<b>4</b>
<b>7</b>	<b>Load/inflation tables .....</b>	<b>4</b>
<b>8</b>	<b>Load capacities for earth-mover tyres on industrial vehicles .....</b>	<b>4</b>
Bibliography .....		22