

DIN EN 13757-3:2025-10 (E)

Communication systems for meters - Part 3: Application protocols

Contents		Page
European foreword		5
Introduction		7
1	Scope	9
2	Normative references	9
3	Terms and definitions	9
4	Abbreviations and symbols	10
4.1	Abbreviations	10
4.2	Symbols	11
5	Selection of an application protocol	11
6	M-Bus protocol	12
6.1	General	12
6.2	M-Bus data record	12
6.3	Data Information Block (DIB)	12
6.3.1	General	12
6.3.2	Data Information Field (DIF)	13
6.3.3	Data field	13
6.3.4	Function Field	14
6.3.5	Storage number	15
6.3.6	Extension bit (E)	15
6.3.7	Data Information Field Extension (DIFE)	15
6.3.8	Tariff information	15
6.3.9	Subunit information	16
6.4	Value Information Block (VIB)	16
6.4.1	General	16
6.4.2	Primary VIFs (main table)	17
6.4.3	VIF-codes for special purposes	18
6.4.4	VIFE-code extension tables	19
6.4.5	Alternate VIFE-code extension table (following VIF = FBh for primary VIF)	25
6.4.6	Combinable (orthogonal) VIFE-Code extension table	26
6.4.7	Generalized object layer	30
6.4.8	Record errors	31
6.5	Sensor specific information	32
6.5.1	General	32
6.5.2	Sub device type for Sensors	32
6.5.3	Status bits of specific sensors	34
6.5.4	Type or class of approval	38
6.6	Manufacturer specific unstructured data block	38
7	Application reset and application select	39
7.1	Application reset	39
7.2	Application select with subcode	39
7.3	Overview about CI-fields for application reset and application select	42
7.4	Rules for application selection	42
7.4.1	Reset of current slave response	42
7.4.2	Erroneous application select	43

7.5	Rules for block selection	43
7.6	Selected application block in M-Bus application protocol	43
8	Clock synchronization	43
9	Report of alarm status (slave to master)	44
10	Report of application error	44
10.1	General	44
10.2	Status field	44
10.3	General application layer errors	44
11	Switching baud rate for M-Bus link layer according to EN 13757-2	46
12	Synchronize action	46
13	Manufacturer specific protocols	46
14	Other application protocols	46
15	Image Transfer	47
Annex A (normative) Coding of data records		48
Annex B (normative) Interpretation of hex-codes Ah-Fh in BCD-data fields		56
B.1	General description standard reference	56
B.2	Definition	56
Annex C (normative) VIF coding for special units		57
C.1	Non-metric units	57
C.2	Plain text units	57
C.3	Remote enablement/disablement of valve/breaker	58
Annex D (informative) Alarm protocol		59
D.1	M-Bus according to EN 13757-2	59
D.2	Wireless M-Bus according to EN 13757-4	59
Annex E (informative) Special sequences for M-Bus devices		60
E.1	VIF/VIFE/VIFE = FDh 97h 1Dh (error flag)	60
E.2	VIF/VIFE/VIFE = FDh 9Fh 1Dh for passing remote control on a node	62
E.3	Clock synchronization	63
Annex F (normative) Transmission of profiles		66
F.1	The standard load profile	66
F.2	The M-Bus compact profile	67
Annex G (normative) Compact M-Bus frame		72
G.1	General	72
G.2	CI-fields of the Full and the Compact M-Bus frame	72
G.3	Calculation of the Full-Frame-CRC	74
G.4	Calculation of the Format Signature	74
G.5	Frame examples	75
Annex H (normative) Translating M-Bus type record descriptors to OBIS-type record descriptors ...		77
H.1	General	77

H.2	Translation of predefined data record types	77
H.3	Online addition of an entry for the M-Bus to OBIS conversion table	95
Annex I (normative) Image Transfer		96
I.1	Image Transfer phases	96
I.2	Commands for Image Transfer	99
I.3	Overview Image Transfer	116
Annex J (informative) Example for electrical phase angles		118
J.1	Phase angle between UL1 and UL2, UL3	118
J.2	Phase angle between UL1 and IL1	118
Bibliography		120