

# DIN EN 16906:2023-12 (E)

## Liquid petroleum products - Determination of the ignition quality of diesel fuels - Fixed compression ratio engine method

---

<b>Contents</b>		<b>Page</b>
European foreword .....		4
Introduction .....		5
1	Scope .....	6
2	Normative references .....	6
3	Terms and definitions .....	6
4	Principle .....	7
5	Reagents and materials .....	7
5.1	Reference materials .....	7
5.2	Check fuels .....	8
6	Apparatus .....	8
6.1	General .....	8
6.2	Mechanical equipment .....	9
6.3	Electrical equipment .....	10
6.4	Reference fuel dispensing equipment .....	11
7	Sampling .....	11
8	Standard operating and test conditions .....	12
9	Calibration, verification and quality control .....	12
10	Procedure .....	12
10.1	Engine check and warm-up .....	12
10.2	Bracketing procedure .....	13
10.2.1	Unknown sample .....	13
10.2.2	First primary reference fuel .....	13
10.2.3	Second primary reference fuel .....	13
10.2.4	Repeat readings .....	14
10.3	Procedure using a calibration graph .....	14
10.4	Shut-down of the engine .....	15
11	Calculation .....	15
11.1	Calculation for the bracketing procedure .....	15
11.2	Calculation for the calibration graph .....	15
12	Expression of results .....	16
13	Precision .....	16
13.1	General .....	16
13.2	Repeatability .....	16
13.3	Reproducibility .....	16
Annex A (informative)	Evaluation example of the cetane number using a calibration graph .....	17

<b>Annex B (informative) Auxiliary digital equipment .....</b>	<b>18</b>
<b>B.1 General .....</b>	<b>18</b>
<b>B.2 Apparatus .....</b>	<b>18</b>
<b>B.2.1 Oil-pressure sensor, installed at the oil pressure line .....</b>	<b>18</b>
<b>B.2.2 Oil temperature sensor, combined with the additionally supplied oil dip-stick to be placed into the designated borehole .....</b>	<b>18</b>
<b>B.2.3 Exhaust gas temperature sensor, placed to the exhaust-pipe .....</b>	<b>18</b>
<b>B.2.4 Cooling-water temperature sensor, installed at the water elbow joint .....</b>	<b>18</b>
<b>B.2.5 Injection Pick-up, placed on the injection nozzle .....</b>	<b>18</b>
<b>B.2.6 Dead-Top Centre (DTC) Pick-up, installed at the fastener opposite to the flywheel .....</b>	<b>18</b>
<b>B.2.7 Combustion Pick-up, inductive pressure difference sensor or absolute pressure sensor.18 B.2.8 Vacuum sensor, installed at the entrance of the surge tank .....</b>	<b>18</b>
<b>B.2.9 Ambient sensor, for absolute air pressure, temperature and humidity .....</b>	<b>18</b>
<b>B.2.10 Intake air temperature sensor (optional), for monitoring the steady-state conditions for operating the engine .....</b>	<b>18</b>
<b>B.2.11 Diesel flow meter (optional), for measuring the diesel flow rate .....</b>	<b>18</b>
<b>B.3 Set-up .....</b>	<b>18</b>
<b>B.4 Calibration .....</b>	<b>19</b>
<b>Bibliography .....</b>	<b>20</b>