

# ISO 4266-4:2002-11 (E)

## Petroleum and liquid petroleum products - Measurement of level and temperature in storage tanks by automatic methods - Part 4: Measurement of temperature in atmospheric tanks

---

<b>Contents</b>		<b>Page</b>
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>Precautions .....</b>	<b>2</b>
<b>4.1</b>	<b>Safety precautions .....</b>	<b>2</b>
<b>4.2</b>	<b>Equipment precautions .....</b>	<b>2</b>
<b>4.3</b>	<b>General precautions .....</b>	<b>3</b>
<b>5</b>	<b>Accuracy .....</b>	<b>3</b>
<b>5.1</b>	<b>General .....</b>	<b>3</b>
<b>5.2</b>	<b>Intrinsic error of ATTs .....</b>	<b>3</b>
<b>5.3</b>	<b>Calibration prior to installation .....</b>	<b>3</b>
<b>5.3.1</b>	<b>General .....</b>	<b>3</b>
<b>5.3.2</b>	<b>ATT calibrated as a system .....</b>	<b>4</b>
<b>5.3.3</b>	<b>ATT calibrated by components .....</b>	<b>4</b>
<b>5.3.4</b>	<b>Multiple-point ATTs .....</b>	<b>4</b>
<b>5.3.5</b>	<b>Variable-length ATTs .....</b>	<b>4</b>
<b>5.3.6</b>	<b>Uncertainty of the reference .....</b>	<b>4</b>
<b>5.4</b>	<b>Error caused by installation and operating conditions .....</b>	<b>4</b>
<b>5.5</b>	<b>Overall accuracy .....</b>	<b>5</b>
<b>5.5.1</b>	<b>General .....</b>	<b>5</b>
<b>5.5.2</b>	<b>Use of ATT for fiscal/custody transfer purposes .....</b>	<b>5</b>
<b>6</b>	<b>Selection of ATTs .....</b>	<b>5</b>
<b>6.1</b>	<b>General .....</b>	<b>5</b>
<b>6.2</b>	<b>ATTs for fiscal/custody transfer purposes .....</b>	<b>6</b>
<b>7</b>	<b>Description of ATT equipment .....</b>	<b>6</b>
<b>7.1</b>	<b>Introduction .....</b>	<b>6</b>
<b>7.2</b>	<b>Electrical temperature elements .....</b>	<b>6</b>
<b>7.2.1</b>	<b>Resistance temperature detectors .....</b>	<b>6</b>
<b>7.2.2</b>	<b>Other temperature elements .....</b>	<b>7</b>
<b>8</b>	<b>Installation of ATTs .....</b>	<b>7</b>
<b>8.1</b>	<b>General .....</b>	<b>7</b>
<b>8.2</b>	<b>Single-point (spot) temperature elements .....</b>	<b>7</b>
<b>8.3</b>	<b>Averaging temperature elements .....</b>	<b>7</b>
<b>8.3.1</b>	<b>General .....</b>	<b>7</b>
<b>8.3.2</b>	<b>Upper, middle and lower temperature elements .....</b>	<b>7</b>
<b>8.3.3</b>	<b>Multiple-point temperature elements .....</b>	<b>8</b>
<b>8.3.4</b>	<b>Variable-length RTD temperature elements .....</b>	<b>8</b>
<b>8.3.5</b>	<b>Mid-level temperature element .....</b>	<b>8</b>
<b>8.3.6</b>	<b>Moveable spot temperature element .....</b>	<b>8</b>
<b>8.3.7</b>	<b>Other methods .....</b>	<b>9</b>
<b>8.4</b>	<b>Thermowells for electronic temperature elements .....</b>	<b>9</b>

<b>9</b>	<b>Calibration and field verification of ATTs .....</b>	<b>11</b>
<b>9.1</b>	<b>Introduction .....</b>	<b>11</b>
<b>9.2</b>	<b>Calibration of single-point, or mid-level temperature element ATTs for fiscal/custody transfer purposes .....</b>	<b>11</b>
<b>9.2.1</b>	<b>Calibration prior to installation .....</b>	<b>11</b>
<b>9.2.2</b>	<b>Initial field verification .....</b>	<b>11</b>
<b>9.3</b>	<b>Calibration of upper, middle and lower or multiple-point ATTs for fiscal/custody transfer purposes .....</b>	<b>12</b>
<b>9.3.1</b>	<b>Calibration prior to installation .....</b>	<b>12</b>
<b>9.3.2</b>	<b>Initial field verification .....</b>	<b>12</b>
<b>9.4</b>	<b>Calibration of variable-length ATTs for fiscal/custody transfer purposes .....</b>	<b>13</b>
<b>9.4.1</b>	<b>Calibration prior to installation .....</b>	<b>13</b>
<b>9.4.2</b>	<b>Initial field verification .....</b>	<b>13</b>
<b>9.5</b>	<b>Subsequent verification of ATTs .....</b>	<b>13</b>
<b>9.5.1</b>	<b>General .....</b>	<b>13</b>
<b>9.5.2</b>	<b>Frequency of subsequent verification .....</b>	<b>13</b>
<b>9.5.3</b>	<b>Record keeping .....</b>	<b>13</b>
<b>10</b>	<b>Data communication and receiving .....</b>	<b>13</b>