

# DIN EN ISO 16315:2016-08 (E)

## Small craft - Electric propulsion system (ISO 16315:2016)

---

<b>Contents</b>		<b>Page</b>
European foreword .....		4
<b>Annex ZA (informative) Relationship between this European Standard and the Essential Requirements of Directive 2013/53/EU</b> .....		<b>5</b>
Foreword .....		7
Introduction .....		8
<b>1</b>	<b>Scope</b> .....	<b>9</b>
<b>2</b>	<b>Normative references</b> .....	<b>9</b>
<b>3</b>	<b>Terms and definitions</b> .....	<b>10</b>
<b>4</b>	<b>General requirements</b> .....	<b>13</b>
4.1	General .....	13
4.2	Components of an electric propulsion system .....	14
4.3	Electric propulsion systems .....	14
4.4	Arrangements for other electrical equipment and circuits on-board a small craft connected to a common energy source for both propulsion and general electrical installation .....	16
4.4.1	DC systems .....	16
4.4.2	AC systems .....	16
4.5	Environmental factors .....	17
4.6	Electrical ratings .....	17
4.7	Equipment .....	18
4.7.1	Transformers .....	18
4.7.2	Converters .....	18
4.7.3	Motors .....	18
4.8	Enclosures .....	18
4.9	Identification of equipment and conductors .....	18
4.10	Segregation of DC and AC systems .....	19
4.11	Steering and throttle controls .....	19
4.12	Electromagnetic compatibility (EMC) .....	19
4.13	Electrical equipment in the vicinity of battery banks .....	19
4.14	Hazardous areas .....	19
<b>5</b>	<b>Controls, monitoring, system alerts and trips alarms</b> .....	<b>20</b>
5.1	Electrical/electronic controls for electric propulsion systems .....	20
5.1.1	Controls .....	20
5.1.2	Emergency stop .....	21
5.1.3	Fault trip reset .....	21
5.1.4	“Get you home” mode .....	21
5.2	Instruments, alerts and trip alarms .....	21
5.2.1	General .....	21
5.2.2	Operating mode and status .....	21
5.2.3	System alerts .....	22
5.2.4	Fault trip alarms .....	22
<b>6</b>	<b>Protection against electric shock</b> .....	<b>22</b>
6.1	Protection against direct contact .....	22
6.2	Automatic disconnection of supply to the electric propulsion system under fault-to-earth conditions (earthed two wire DC systems and earthed neutral AC systems) .....	22
6.3	Fault-to-earth monitoring and tripping arrangements for DC fully insulated systems, DC 3-wire systems .....	23
6.4	Fault-to-earth tripping in AC non-neutral earthed systems (IT-type system) .....	24

<b>7</b>	<b>Protection against over-current</b> .....	<b>24</b>
	7.1 General.....	24
	7.2 Characteristics of protective devices.....	24
	7.3 Overcurrent devices in the outgoing circuit(s) from a battery.....	25
<b>8</b>	<b>Battery monitoring and installation</b> .....	<b>25</b>
	8.1 General arrangements.....	25
	8.2 Isolation of battery packs or battery banks.....	25
	8.3 Operational switching of battery pack(s) or battery bank(s).....	26
	8.4 Permanently energized circuits.....	26
	8.5 Ventilation.....	27
	8.6 Electrical apparatus for explosive gas atmospheres.....	27
<b>9</b>	<b>Electrical installation</b> .....	<b>27</b>
	9.1 General.....	27
	9.2 Segregation of electrical propulsion system cables.....	27
<b>10</b>	<b>Testing</b> .....	<b>28</b>
	10.1 General.....	28
	10.2 Earthing and bonding.....	28
	10.3 Insulation resistance.....	28
	10.3.1 General.....	28
	10.3.2 DC electrical propulsion systems.....	28
	10.3.3 AC electrical propulsion systems.....	28
	10.3.4 Switchboards, panel boards and distribution boards.....	28
	10.3.5 Power and lighting final circuits.....	29
	10.3.6 Generators and motors.....	29
	10.3.7 Transformers.....	29
	10.4 Electrical/electronic controls systems for propulsion motor control.....	29
	10.5 On load test and inspection of electrical propulsion systems, and associated switch gear and control gear.....	29
	10.6 Voltage drop.....	29
	<b>Annex A (normative) Information and instructions to be included in the owner’s manual</b> .....	<b>30</b>
	<b>Annex B (normative) Installation documentation</b> .....	<b>31</b>
	<b>Bibliography</b> .....	<b>32</b>