

ISO 22472:2016-09 (E)

Ships and marine technology - Guidelines for the operation and installation of voyage data recorder (VDR)

Contents		Page
Foreword		v
1	Scope	1
2	Normative references	1
3	Terms, definitions and abbreviated terms	2
3.1	Terms and definitions	2
3.2	Abbreviated terms	4
4	VDR interface	4
4.1	General	4
4.2	Input signals required for VDR interfaces	4
4.2.1	Signals defined in applicable parts of IEC 61162 series	4
4.2.2	Signals other than IEC 61162 format	5
4.2.3	Bridge audible sound captured by microphones	6
4.2.4	VHF radio connection	6
4.2.5	Radar display connection	6
4.2.6	ECDIS display connection	6
4.3	Main alarms	7
4.4	AIS	7
4.5	Bridge alert management interface	7
5	Details of interfaces between sensors and VDR	7
5.1	General	7
5.2	Date and time (IEC 61996-1:2013, 4.6.1)	7
5.3	Ship's position (IEC 61996-1:2013, 4.6.2)	8
5.4	Speed (IEC 61996-1:2013, 4.6.3)	8
5.5	Heading (IEC 61996-1:2013, 4.6.4)	8
5.6	Bridge audio (IEC 61996-1:2013, 4.6.5)	9
5.7	VHF communication audio (IEC 61996-1:2013, 4.6.6)	9
5.8	Radar data-post-display selection (IEC 61996-1:2013, 4.6.7)	9
5.9	ECDIS (IEC 61996-1:2013, 4.6.8)	11
5.10	Depth (Echo sounder) (IEC 61996-1:2013, 4.6.9)	12
5.11	Main alarms on the bridge (IEC 61996-1:2013, 4.6.10)	12
5.12	Rudder order and response (IEC 61996-1:2013, 4.6.11)	13
5.12.1	Rudder order and response from HCS or TCS (if installed)	13
5.12.2	Rudder order and response from steering system	13
5.13	Engine and thruster order and response (IEC 61996-1:2013, 4.6.12)	14
5.13.1	Engine order and response	14
5.13.2	Thruster order and response	14
5.14	Hull openings (doors) status (IEC 61996-1:2013, 4.6.13)	15
5.15	Watertight and fire door status (IEC 61996-1:2013, 4.6.14)	15
5.15.1	Watertight and fire door status	15
5.16	Accelerations and hull stresses (IEC 61996-1:2013, 4.6.15)	16
5.17	Wind speed and direction (IEC 61996-1:2013, 4.6.16)	16
5.18	AIS data (IEC 61996-1:2013, 4.6.17)	16
5.19	Rolling motion (IEC 61996-1:2013, 4.6.18)	17
5.20	Configuration (IEC 61996-1:2013, 4.6.19)	17
5.21	Electronic logbook (IEC 61996-1:2013, 4.6.20)	17

6	Installation	18
6.1	Required VDR equipment	18
6.2	Power supply of the VDR and interfaces	18
6.2.1	Power supply from the ship's emergency source of electrical power	18
6.2.2	Power supply from the reserve power source	18
6.3	Installation of the protective capsule and float free capsule (IEC 61996-1:2013, 5.1.1)	18
6.4	Positions of microphones (IEC 61996-1:2013, 4.6.5)	19
6.5	Cable connections	19
6.6	Ship specific documentation	19
6.6.1	Planning and approval documentation	19
7	Acceptance test (Commissioning)	20
8	Performance Tests	20
8.1	General	20
8.2	Operational Performance Test (IEC 61996-1:2013, 5.12)	20
8.3	Annual Performance Test	20
9	Download and playback equipment for investigation authorities	21
9.1	General	21
9.2	Information for use by an investigation authority (IEC 61996-1)	21
	Annex A (informative) Mandatory alarms (IEC 61996-1:2013, Annex B)	22
	Annex B (informative) LAN image protocol (IEC 61996-1:2013, Annex E)	25
	Annex C (informative) Network for image transmission (IEC 61996-1:2013, Annex F)	30
	Annex D (informative) ECDIS display source information (IEC 61996-1:2013, Annex G)	33
	Annex E (informative) Manufacturer's documentation (IEC 61996-1:2013, 5.5)	38
	Annex F (informative) Performance test report (IMO Circular MSC.1/Circ.1222 Appendix)	40
	Bibliography	45