

# ISO 10240:2022-11 (E)

## Small craft - Owner's manual

---

<b>Contents</b>		<b>Page</b>
Foreword .....		v
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>2</b>
<b>4</b>	<b>General requirements .....</b>	<b>2</b>
<b>4.1</b>	<b>Information required .....</b>	<b>2</b>
<b>4.2</b>	<b>Format .....</b>	<b>2</b>
<b>4.3</b>	<b>Units and definitions .....</b>	<b>3</b>
<b>4.4</b>	<b>Illustrations .....</b>	<b>3</b>
<b>5</b>	<b>Content of owner's manual .....</b>	<b>3</b>
<b>5.1</b>	<b>General .....</b>	<b>3</b>
<b>5.2</b>	<b>Introduction to the manual .....</b>	<b>3</b>
<b>5.3</b>	<b>General information and craft data .....</b>	<b>3</b>
<b>5.4</b>	<b>Maximum number of persons .....</b>	<b>6</b>
<b>5.5</b>	<b>Loading .....</b>	<b>6</b>
<b>5.6</b>	<b>Engine information .....</b>	<b>7</b>
<b>5.7</b>	<b>Information connected with the risk of flooding and stability .....</b>	<b>7</b>
<b>5.7.1</b>	<b>General .....</b>	<b>7</b>
<b>5.7.2</b>	<b>Openings in the hull .....</b>	<b>7</b>
<b>5.7.3</b>	<b>Bilge pumps and bailing .....</b>	<b>7</b>
<b>5.7.4</b>	<b>Stability and buoyancy .....</b>	<b>8</b>
<b>5.7.5</b>	<b>Capsize recovery .....</b>	<b>8</b>
<b>5.7.6</b>	<b>Habitable multihull susceptible to inversion .....</b>	<b>8</b>
<b>5.7.7</b>	<b>Grounding .....</b>	<b>8</b>
<b>5.8</b>	<b>Information connected with the risk of fire or explosion .....</b>	<b>8</b>
<b>5.8.1</b>	<b>General .....</b>	<b>8</b>
<b>5.8.2</b>	<b>Propulsion engines, generator sets, etc .....</b>	<b>8</b>
<b>5.8.3</b>	<b>Gas system .....</b>	<b>9</b>
<b>5.8.4</b>	<b>Other fuel-burning systems .....</b>	<b>9</b>
<b>5.8.5</b>	<b>Fire prevention and fire-fighting equipment .....</b>	<b>9</b>
<b>5.8.6</b>	<b>Means of fire escape .....</b>	<b>9</b>
<b>5.9</b>	<b>Electrical systems -- Risks of fire, explosion or electric shocks .....</b>	<b>9</b>
<b>5.10</b>	<b>Handling characteristics .....</b>	<b>10</b>
<b>5.10.1</b>	<b>Motor craft .....</b>	<b>10</b>
<b>5.10.2</b>	<b>Engine starting .....</b>	<b>10</b>
<b>5.10.3</b>	<b>Emergency steering .....</b>	<b>10</b>
<b>5.11</b>	<b>Proper operation -- Other recommendations and information .....</b>	<b>10</b>
<b>5.11.1</b>	<b>Man-overboard prevention and recovery .....</b>	<b>10</b>
<b>5.11.2</b>	<b>Liferaft stowage .....</b>	<b>11</b>
<b>5.11.3</b>	<b>Danger from moving parts of machinery .....</b>	<b>11</b>
<b>5.11.4</b>	<b>Ventilation when using a combustion device .....</b>	<b>11</b>
<b>5.11.5</b>	<b>Securing of loose equipment .....</b>	<b>11</b>
<b>5.11.6</b>	<b>Respect for environment .....</b>	<b>11</b>
<b>5.11.7</b>	<b>Use of holding tanks .....</b>	<b>11</b>
<b>5.11.8</b>	<b>Anchoring, mooring and towing .....</b>	<b>12</b>
<b>5.11.9</b>	<b>Trailer (if relevant) .....</b>	<b>12</b>
<b>5.12</b>	<b>Sailboat spars and rigging .....</b>	<b>12</b>

<b>6</b>	<b>Other information .....</b>	<b>12</b>
	<b>Annex A (informative) General introduction for the owner's manual .....</b>	<b>13</b>
	<b>Annex B (informative) List of International Standards requiring information and safety labels to be inserted in the owner's manual .....</b>	<b>14</b>
	<b>Bibliography .....</b>	<b>16</b>