

# ISO 18962:2026-01 (E)

## Ships and marine technology - Installation and operational requirements for swappable batteries on ships

---

<b>Contents</b>		<b>Page</b>
Foreword .....		iv
<b>1</b>	<b>Scope .....</b>	<b>1</b>
<b>2</b>	<b>Normative references .....</b>	<b>1</b>
<b>3</b>	<b>Terms and definitions .....</b>	<b>1</b>
<b>4</b>	<b>Requirements .....</b>	<b>2</b>
4.1	General requirements .....	2
4.2	Installation .....	2
4.3	Operation .....	2
4.3.1	Vibration and mechanical shock .....	2
4.3.2	Immersion into water .....	2
4.3.3	Exposure to fire .....	3
4.3.4	Protection against internal overheating .....	3
4.3.5	Lashing .....	3
4.3.6	Measures in case of emergency .....	3
4.3.7	Human safety .....	3
<b>5</b>	<b>Testing .....</b>	<b>4</b>
5.1	Test conditions .....	4
5.2	Installation .....	4
5.3	Operation .....	4
5.3.1	Vibration and mechanical shock .....	4
5.3.2	Immersion into water .....	4
5.3.3	Exposure to fire .....	4
5.3.4	Protection against internal overheating .....	5
5.3.5	Lashing .....	5
<b>6</b>	<b>Supplementary information .....</b>	<b>5</b>
Bibliography .....		6